

SHINOHAWA

DIGITAL MULTIMETER KM-9696 SERIES



DISPLAY		Red high efficiency LED high 9.14mm (.36")
ACCURACY		± 0.5% ± 2 digit
OPERATING CONDITION		-10°C~50°C (20% to 90% RH non-condensed)
DIELECTRIC STRENGTH		AC 2KV/1min
AUX. POWER		AC110V/220V 50/60Hz
MEASUREMENT RANGE	KM96-3M	<p>Display: 3 windows. Function: Display Current, Voltage, and Frequency Simultaneously. Ranges: Direct Measurement Current: AC 0 – 5A. For Current above 5A, Current Transformer (C.T.) must be used. Press Key \curvearrowright to select desirable C. T. Ratio. The following are the available C.T. Ratios: 10A/5A, 15A/5A, 20A/5A, 25A/5A, 30A/5A, 40A/5A, 50A/5A, 60A/5A, 70A/5A, 75A/5A, 80A/5A, 100A/5A, 120A/5A, 150A/5A, 160A/5A, 200A/5A, 250A/5A, 300A/5A, 400A/5A, 500A/5A, 600A/5A, 700A/5A, 750A/5A, 800A/5A, 1kA/5A, 1.2kA/5A, 1.5kA/5A, 1.6kA/5A, 2kA/5A, 2.5kA/5A, 3kA/5A, 4kA/5A, 5kA/5A, 6kA/5A, 7kA/5A, 7.5kA/5A, 8kA/5A. Note: Red LED indicates Ampere. Green LED indicates Kilo-ampere (kA). Voltage: AC 50-600V. Frequency: 1-99.9Hz.</p>
	KM96-4M	<p>Display: 4 windows. Function: Display 3 Phase Current and 1 Phase Voltage Simultaneously. Press Key "V1/V2/V3" to switch voltage display among 3 phases (L-L or L-N). Ranges: Direct Measurement Current: AC 0 – 5A. For Current above 5A, Current Transformer (C.T.) must be used. Press Key \curvearrowright to select desirable C. T. Ratio. The following are the available C.T. Ratios: 10A/5A, 15A/5A, 20A/5A, 25A/5A, 30A/5A, 40A/5A, 50A/5A, 60A/5A, 70A/5A, 75A/5A, 80A/5A, 100A/5A, 120A/5A, 150A/5A, 160A/5A, 200A/5A, 250A/5A, 300A/5A, 400A/5A, 500A/5A, 600A/5A, 700A/5A, 750A/5A, 800A/5A, 1kA/5A, 1.2kA/5A, 1.5kA/5A, 1.6kA/5A, 2kA/5A, 2.5kA/5A, 3kA/5A, 4kA/5A, 5kA/5A, 6kA/5A, 7kA/5A, 7.5kA/5A, 8kA/5A. Note: Red LED indicates Ampere. Green LED indicates Kilo-ampere (kA). Voltage: AC 50 - 600V.</p>
	KM96-5M	<p>Display: 5 windows. Function: Display 3 Phase Current, 1 Phase Voltage, and Frequency Simultaneously. Press Key "V1/V2/V3" to switch voltage display among 3 phases (L-L or L-N). Ranges: Direct Measurement Current: AC 0 – 5A. For Current above 5A, Current Transformer (C.T.) must be used. Press Key \curvearrowright to select desirable C. T. Ratio. The following are the available C.T. Ratios: 10A/5A, 15A/5A, 20A/5A, 25A/5A, 30A/5A, 40A/5A, 50A/5A, 60A/5A, 70A/5A, 75A/5A, 80A/5A, 100A/5A, 120A/5A, 150A/5A, 160A/5A, 200A/5A, 250A/5A, 300A/5A, 400A/5A, 500A/5A, 600A/5A, 700A/5A, 750A/5A, 800A/5A, 1kA/5A, 1.2kA/5A, 1.5kA/5A, 1.6kA/5A, 2kA/5A, 2.5kA/5A, 3kA/5A, 4kA/5A, 5kA/5A, 6kA/5A, 7kA/5A, 7.5kA/5A, 8kA/5A. Note: Red LED indicates Ampere. Green LED indicates Kilo-ampere (kA). Voltage: AC 50 - 600V. Frequency: 1 - 99.9Hz.</p>
STANDARD FEATURES		<ul style="list-style-type: none"> • This key is for selecting C.T. ratio. • This Key for setting measuring function. (V1 – V2 – V3)
DIMENSION		